


## CODE CHANGE INSTRUCTIONS

**BEFORE** Attempting to change your code number, please read this information carefully - then follow the step by step instructions using the diagrams as a guide.

RED TUMBLERS : CODE  
 BLUE TUMBLERS : NON-CODE  
 " C " TUMBLER : FOR CLEAR, CANNOT BE REMOVED  
 WHITE TUMBLER : FOR PASSAGE FUNCTION, IF REMOVED, PASSAGE FUNCTION DOES NOT WORK.  
 DO NOT REPLACE WITH ANY OTHER TUMBLER.

Although your code group number is not sequential, there are a possible 5,500 code possibilities.


When changing your code number, it is VERY IMPORTANT that ALL the 'code' and 'non-code' tumblers are replaced CORRECTLY. - if 1 or more of your code/non-code tumblers are replaced INCORRECTLY, your lock will NOT work and it may damage the lock.

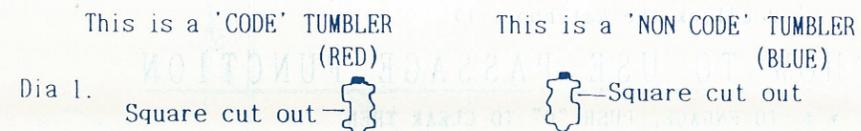

EACH is COLOURED at the TOP end - EACH has a SQUARE CUT OUT on ONE SIDE ONLY. (see Dia 1)

The code/non code tumblers are positioned in the Lock so that the

- Coloured top end is facing upwards
- Square cut out is facing the nearest outside edge of the Lock body as shown below

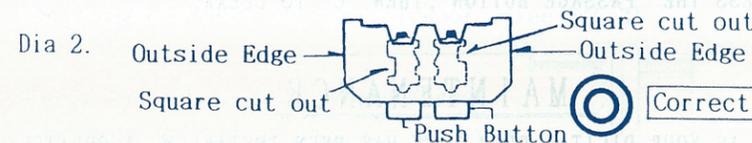

So when you change your code number, ALWAYS remember to replace the code/non code tumblers in the CORRECT positions as shown in Dia 2. and not the incorrect positions as shown in Dia 3.




## HOW TO CHANGE THE CODE NUMBER

Remove your Digital Door Lock from the box or door.

Hold the outside body in the horizontal position. remove the 4 red screws. and carefully remove the plate.

PAY ATTENTION FOR HANDLING THE LID AS IT IS INSTALLED THE MANY SPRINGS AT THE INSIDE OF THE LID

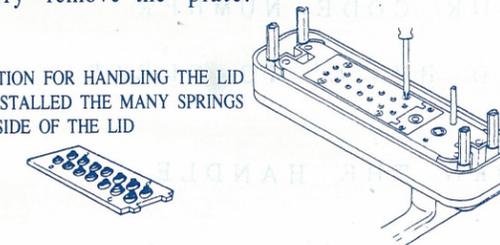


\*Decide on the code group number you wish to use.

HOW TO REMOVE code/non code tumblers

-Still holding the Lock in the horizontal position PRESS the C button in from underneath, continue pressing in the C button until you have COMPLETED the code change.

Using the tweezers provided lift out the code/non code tumblers you wish to change NEVER attempt to remove the C tumbler.

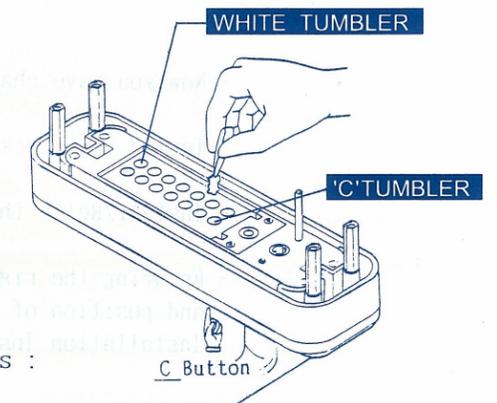


**REMEMBER** - To increase the number of digits :  
 Add more red 'code' tumblers.  
 - To decrease the number of digits :  
 Add more blue 'non code' tumblers.      \*Press in the C Button

**DO NOT REMOVE A C-TUMBLER AND A WHITE TUMBLER, ABSOLUTELY.**

HOW TO REPLACE code/non code tumblers

-Still pressing in the C button.  
 -Insert the red code tumblers to form your new code.  
 -Insert the blue 'non code' tumblers into the remaining spaces.

**REMEMBER** : It is important that  
 -The coloured top end is facing upwards.  
 -The square cut out is facing the nearest outside edge of the Lock body.

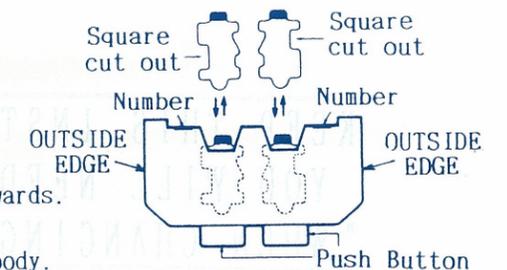

\*\* Release the C button and replace the plate carefully, using the 4 red screws.